


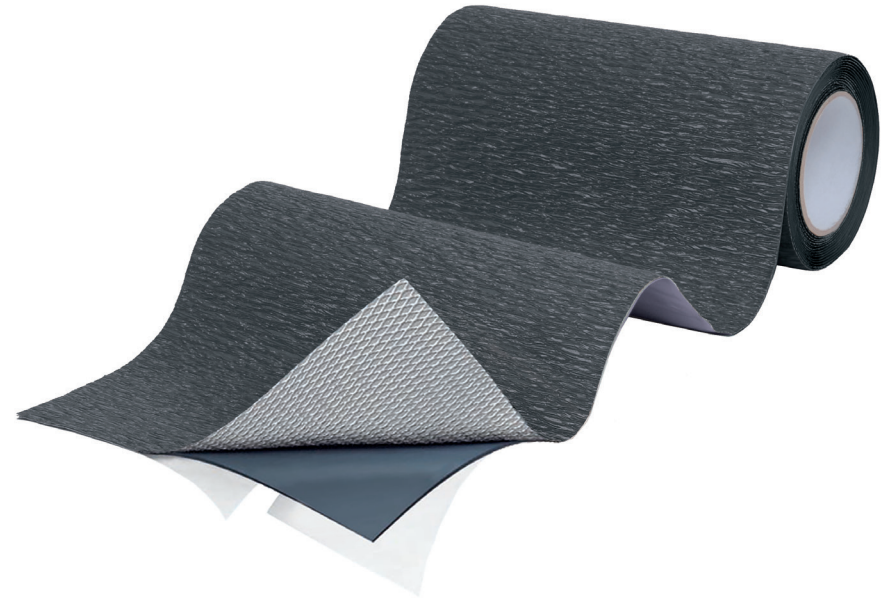

EasyFlash® Strong

Laying Instruction / Verlegeanleitung (02/2018)



EasyFlash® Strong

Laying Instruction / Verlegeanleitung (02/2018)

General Rules:

- Do not use on wet surfaces.
- Apply a 30% overlap.
- Roll out the membrane.
- Table of dimensions (mm):

[mm]	W ₁	W ₂
250	120	130
300	130	170
450	170	280
- Overlap: 10 cm (top), 2 cm (bottom).
- Sealant application: d ≤ 5 cm (no sealant), d > 5 cm (with sealant).

Preparation A:

- Roof pitch requirements:

$\alpha \geq 22^\circ$	≥ 100 mm	≥ 80 mm
$\alpha < 22^\circ$	≥ 150 mm	≥ 100 mm
$\alpha < 15^\circ$	≥ 200 mm	≥ 100 mm
$\alpha \geq 10^\circ$	≥ 200 mm	≥ 150 mm
- Steps 1-6: Unrolling and securing the membrane.

Preparation BI:

- Roof pitch requirements:

$\alpha \geq 22^\circ$	≥ 120 mm	≥ 80 mm
$\alpha < 22^\circ$	≥ 120 mm	≥ 100 mm
$\alpha \geq 10^\circ$	≥ 120 mm	≥ 150 mm
- Steps 1-3: Installation on a pitched roof.

Preparation B2:

- Roof pitch requirements:

$\alpha \geq 22^\circ$	≥ 80 mm	≥ 80 mm
$\alpha < 22^\circ$	≥ 80 mm	≥ 100 mm
$\alpha \geq 10^\circ$	≥ 80 mm	≥ 150 mm
- Overlap/Überlappung ≥ 80 mm.
- Steps 1-5: Installation on a pitched roof.

Preparation C:

- Roof pitch requirements:

$\alpha \geq 22^\circ$	≥ 100 mm	≥ 150 mm
$\alpha < 22^\circ$	≥ 150 mm	≥ 150 mm
$\alpha < 15^\circ$	≥ 200 mm	≥ 150 mm
$\alpha \geq 10^\circ$	≥ 200 mm	≥ 150 mm
- Steps 1-6: Installation on a flat roof.